 


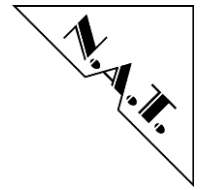


**NAMC-PMC
AMC Carrier for PMC Modules
Technical Reference Manual V1.0
HW Revision 1.0**



The NAMC-PMC has been designed by:

**N.A.T. GmbH
Kamillenweg 22
D-53757 Sankt Augustin
Phone: ++49/2241/3989-0
Fax: ++49/2241/3989-10**

 **E-Mail: sales@nateurope.com
Internet: <http://www.nateurope.com>**

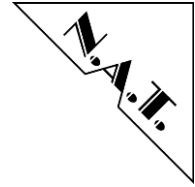

Disclaimer

The following documentation, compiled by N.A.T. GmbH (henceforth called N.A.T.), represents the current status of the product's development. The documentation is updated on a regular basis. Any changes which might ensue, including those necessitated by updated specifications, are considered in the latest version of this documentation. N.A.T. is under no obligation to notify any person, organization, or institution of such changes or to make these changes public in any other way.

We must caution you, that this publication could include technical inaccuracies or typographical errors.

N.A.T. offers no warranty, either expressed or implied, for the contents of this documentation or for the product described therein, including but not limited to the warranties of merchantability or the fitness of the product for any specific purpose.

In no event will N.A.T. be liable for any loss of data or for errors in data utilization or processing resulting from the use of this product or the documentation. In particular, N.A.T. will not be responsible for any direct or indirect damages (including lost profits, lost savings, delays or interruptions in the flow of business activities, including but not limited to, special, incidental, consequential, or other similar damages) arising out of the use of or inability to use this product or the associated documentation, even if N.A.T. or any authorized N.A.T. representative has been advised of the possibility of such damages.

The use of registered names, trademarks, etc. in this publication does not imply, even in the absence of a specific statement, that such names are exempt from the relevant protective laws and regulations (patent laws, trade mark laws, etc.) and therefore free for general use. In no case does N.A.T. guarantee that the information given in this documentation is free of such third-party rights.

Neither this documentation nor any part thereof may be copied, translated, or reduced to any electronic medium or machine form without the prior written consent from N.A.T. GmbH.

This product (and the associated documentation) is governed by the N.A.T. General Conditions and Terms of Delivery and Payment.

Note:

The release of the Hardware Manual is related to a certain HW board revision given in the document title. For HW revisions earlier than the one given in the document title please contact N.A.T. for the corresponding older Hardware Manual release.

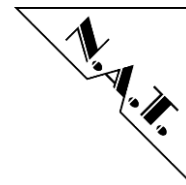 


Table of Contents

LIST OF TABLES 4

LIST OF FIGURES 5

1 INTRODUCTION 6

2 TECHNICAL SPECIFICATIONS 6

2.1 AMC BACKPLANE INTERFACE 6

2.2 PMC INTERFACE 6

2.3 POWER SUPPLY 7

2.4 ENVIRONMENT 7

3 INSTALLATION 8

3.1 SAFETY NOTE 8

3.2 INSTALLATION PREREQUISITES AND REQUIREMENTS 8

3.2.1 *Special Requirements (different to the requirements for “normal” AMCs)* 9

3.2.2 *Requirements* 9

3.2.3 *Power supply* 9

3.2.4 *Automatic Power Up* 9

3.3 STATEMENT ON ENVIRONMENTAL PROTECTION 10

3.3.1 *Compliance to RoHS Directive* 10

3.3.2 *Compliance to WEEE Directive* 10

3.3.3 *Compliance to CE Directive* 11

3.3.4 *Product Safety* 11

4 HARDWARE DESCRIPTION 12

4.1 HARDWARE OVERVIEW 13

4.2 MICRO CONTROLLER 13

4.3 PCIe TO PCI BRIDGE 13

4.4 POWER SUPPLY 13

5 CONNECTORS 14

5.1 PMC CONNECTORS 14

5.2 AMC CONNECTOR CON1 15

5.3 DIP SWITCH SW1 18

5.3.1 *PCIe Reference Clock Select Switch (SW1 Switch 1)* 18

5.3.2 *Reserved (SW1 Switch 2)* 18


5.4 KNOWN BUGS / RESTRICTIONS 19

6 DOCUMENT’S HISTORY 20

List of Tables


Table 1: PMC Connectors P11 and P12 14

 Table 2: AMC Connector CON1 15

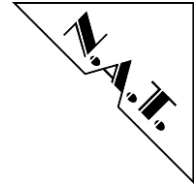

List of Figures


Figure 1:	Block Diagram of the NAMC-PMC Carrier	6
Figure 2:	Location Diagram of the NAMC-PMC Carrier (top-view)	12
Figure 3:	Location Diagram of the NAMC-PMC Carrier (bottom-view)	12

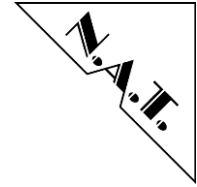 

1 Introduction

The **NAMC-PMC Carrier** is an AMC carrier board intended for use with a PMC or PTMC module. It allows the use of standard PMC modules in a MicroTCA or ATCA system.

 Figure 1: Block Diagram of the NAMC-PMC Carrier

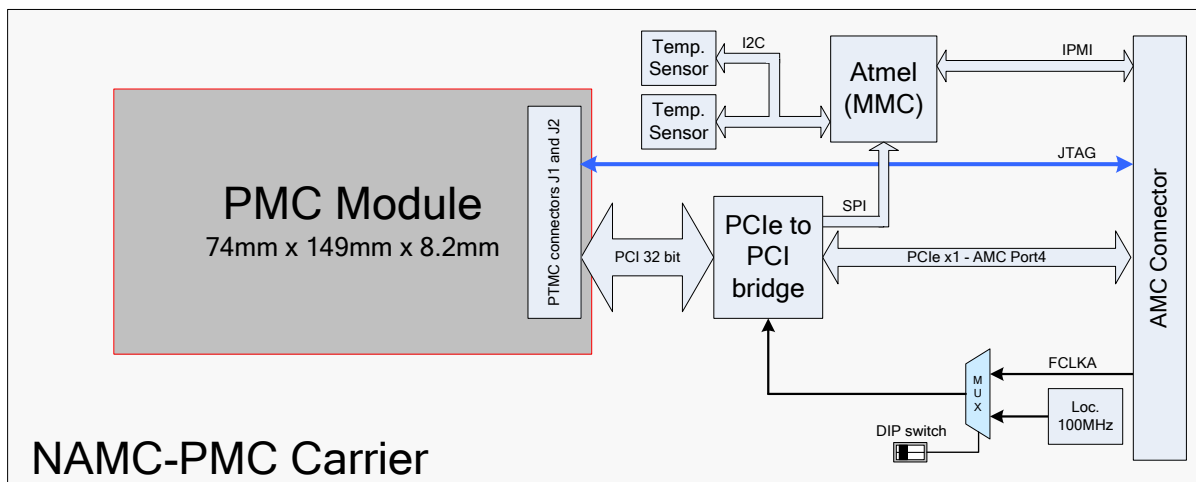

The dimensions of a single with AMC module are very similar to the dimensions of a standard PMC module. This requires some restrictions. Please refer to the [Special Requirements](#) section for a detailed description!

 
2 Technical Specifications

2.1 AMC Backplane Interface

- AMC port 4 (PCIe x1) is connected via PCIe to PCI bridge
- Selectable PCIe reference clock via AMC FCLKA or local oscillator
- JTAG

2.2 PMC Interface

- 32 bit PCI bus
- JTAG

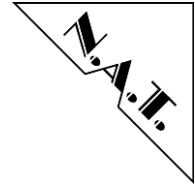

2.3 Power Supply

 
The NAMC-PMC Carrier itself draws very little power from the supplies. The PMC +3.3V, +5V, +12V, -12V are generated from the AMC 12V payload power.

2.4 Environment

Temperature (operating): 0°C to +55°C with forced cooling

Temperature (storage): -40°C to +85°C

Humidity: 10 % to 90 % rh noncondensing

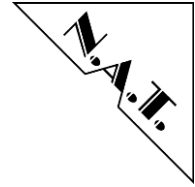

3 Installation

3.1 Safety Note

To ensure proper functioning of the **NAMC-PMC** during its usual lifetime take the following precautions before handling the board.

CAUTION

Electrostatic discharge and incorrect board installation and uninstallation can damage circuits or shorten their lifetime.

 
- Before installing or uninstalling the **NAMC-PMC** read this installation section
- Before installing or uninstalling the **NAMC-PMC**, read the Installation Guide and the User's Manual of the carrier board used, or of the uTCA system the board will be plugged into.
- Before installing or uninstalling the **NAMC-PMC** on a carrier board or both in a rack:
 - Check all installed boards and modules for steps that you have to take before turning on or off the power.
 - Take those steps.
 - Finally turn on or off the power if necessary.
 - Make sure the part to be installed / removed is hot swap capable, if you don't switch off the power.
- Before touching integrated circuits ensure to take all require precautions for handling electrostatic devices.
- Ensure that the **NAMC-xE1** is connected to the carrier board or to the uTCA backplane with the connector completely inserted.
- When operating the board in areas of strong electromagnetic radiation ensure that the module
 - is bolted the front panel or rack
 - and shielded by closed housing

3.2 Installation Prerequisites and Requirements

IMPORTANT

Before powering up

- check this section for installation prerequisites and requirements

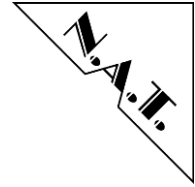

3.2.1 Special Requirements (different to the requirements for “normal” AMCs)

- The width of a standard PMC module is slightly larger than the width of a full width AMC module. The **NAMC-PMC** will still fit into a standard MicroTCA backplane, but the Backplane requires special card guides. Please contact N.A.T. GmbH for a list of backplane Vendors that support these card guides.
- The standard PMC face plate is not much smaller than a half height, full width AMC face plate. Therefore it is no space left to support the hot swap handle and the blue hot swap LED (even though this is required by the AMC specification). Therefore the **NAMC-PMC** does **not** support hot swap!

3.2.2 Requirements

The installation requires only

- an ATCA carrier board, or a μ TCA backplane for connecting the **NAMC-PMC**
- Because the PMC Module has nearly the same size as an AMC module the **NAMC-PMC** carrier requires special card guides. Please contact NAT for a list of backplane Vendors that support these card guides.
- power supply
- cooling devices

3.2.3 Power supply

The power supply for the **NAMC-PMC** must meet the following specifications:

- required for the carrier module:
+12V / 0.6A max.
- the current needed by the PMC module needs to be added!

3.2.4 Automatic Power Up

 
In the following situations the **NAMC-PMC** will automatically be reset and proceed with a normal power up.

Voltage sensors

The voltage sensor generates a reset

- when +12V payload power voltage level drops below 10V
- when +3.3V management power voltage level drops below 3.08V

The PCIe to PCI Bridge will assert the PCI reset towards the PMC module until a PCIe link is established.

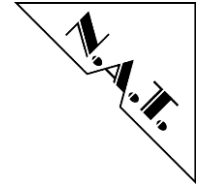

3.3 Statement on Environmental Protection

3.3.1 Compliance to RoHS Directive

Directive 2002/95/EC of the European Commission on the "Restriction of the use of certain Hazardous Substances in Electrical and Electronic Equipment" (RoHS) predicts that all electrical and electronic equipment being put on the European market after June 30th, 2006 must contain lead, mercury, hexavalent chromium, polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE) and cadmium in maximum concentration values of 0.1% respective 0.01% by weight in homogenous materials only.

 
As these hazardous substances are currently used with semiconductors, plastics (i.e. semiconductor packages, connectors) and soldering tin any hardware product is affected by the RoHS directive if it does not belong to one of the groups of products exempted from the RoHS directive.

Although many of hardware products of N.A.T. are exempted from the RoHS directive it is a declared policy of N.A.T. to provide all products fully compliant to the RoHS directive as soon as possible. For this purpose since January 31st, 2005 N.A.T. is requesting RoHS compliant deliveries from its suppliers. Special attention and care has been paid to the production cycle, so that wherever and whenever possible RoHS components are used with N.A.T. hardware products already.

3.3.2 Compliance to WEEE Directive

Directive 2002/95/EC of the European Commission on "Waste Electrical and Electronic Equipment" (WEEE) predicts that every manufacturer of electrical and electronic equipment which is put on the European market has to contribute to the reuse, recycling and other forms of recovery of such waste so as to reduce disposal. Moreover this directive refers to the Directive 2002/95/EC of the European Commission on the "Restriction of the use of certain Hazardous Substances in Electrical and Electronic Equipment" (RoHS).

Having its main focus on private persons and households using such electrical and electronic equipment the directive also affects business-to-business relationships. The directive is quite restrictive on how such waste of private persons and households has to be handled by the supplier/manufacturer, however, it allows a greater flexibility in business-to-business relationships. This pays tribute to the fact with industrial use electrical and electronic products are commonly integrated into larger and more complex environments or systems that cannot easily be split up again when it comes to their disposal at the end of their life cycles.

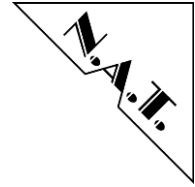

As N.A.T. products are solely sold to industrial customers, by special arrangement at time of purchase the customer agreed to take the responsibility for a WEEE compliant disposal of the used N.A.T. product. Moreover, all N.A.T. products are marked according to the directive with a crossed out bin to indicate that these products within the European Community must not be disposed with regular waste.

 
If you have any questions on the policy of N.A.T. regarding the Directive 2002/95/EC of the European Commission on the "Restriction of the use of certain Hazardous Substances in Electrical and Electronic Equipment" (RoHS) or the Directive 2002/95/EC of the European Commission on "Waste Electrical and Electronic Equipment" (WEEE) please contact N.A.T. by phone or e-mail.

3.3.3 Compliance to CE Directive

Compliance to the CE directive is declared. A 'CE' sign can be found on the PCB.

3.3.4 Product Safety

The board complies to EN60950 and UL1950.

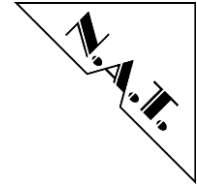

4 Hardware Description

This chapter contains a brief description of the functional blocks of the NAMC-PMC Carrier PMC extender board.

Figure 2: Location Diagram of the NAMC-PMC Carrier (top-view)


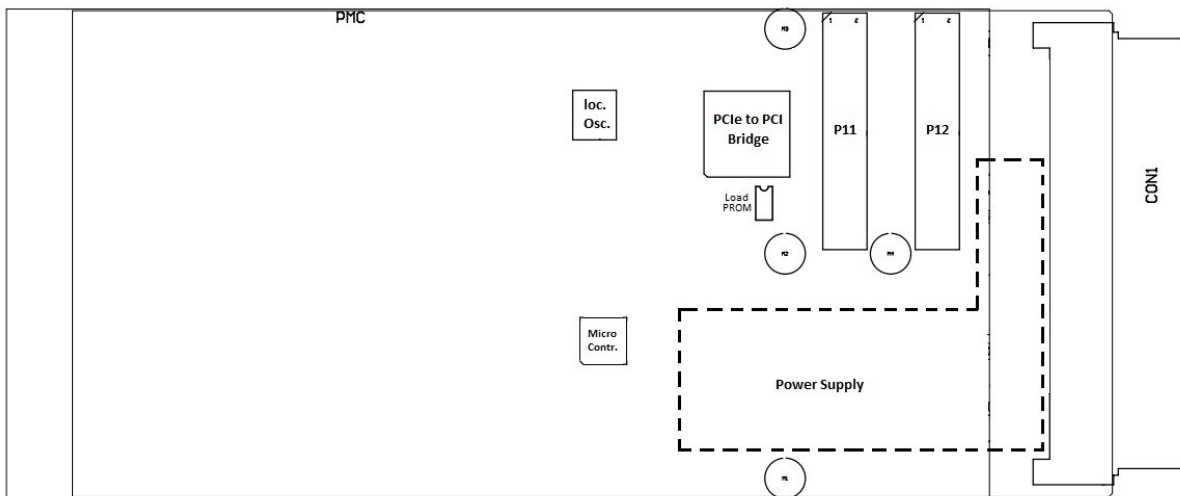 


Figure 3: Location Diagram of the NAMC-PMC Carrier (bottom-view)

 

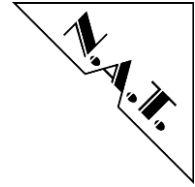

4.1 Hardware Overview

The **NAMC-PMC Carrier** is a non-intelligent carrier board that supports the basics to operate a PMC or PTMC module in a MicroTCA or ATCA System.

4.2 Micro Controller

 
An Atmel AVR microcontroller is used to support the required MMC functionality to acquire power in a managed system. Beside that the microcontroller is used to implement different IPMI sensors to monitor temperature, current, voltage, etc.

4.3 PCIe to PCI Bridge

To provide PCI connectivity for the PMC module a PLX PEX8112 PCIe to PCI bridge resides on the **NAMC-PMC Carrier**.

4.4 Power Supply

Different DC/DC converters are used to generate the different supply voltages for the on-board devices and the PMC module. Power is taken from the +12V AMC payload power to generate the PMC +3.3V, +5V, -12V.

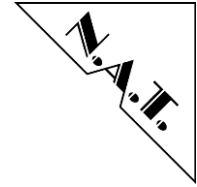


5 Connectors

5.1 PMC Connectors

Table 1: PMC Connectors P11 and P12


P11				P12			
Pin	Signal	Signal	Pin	Pin	Signal	Signal	Pin
1	TCK	-12V	2	1	+12V	TRST#	2
3	Ground	INTA#	4	3	TMS	TDO	4
5	INTB#	INTC#	6	5	TDI	Ground	6
7	NC	+5V	8	7	Ground	PMC-RSVD	8
9	INTD#	PMC-RSVD	10	9	PMC-RSVD	PMC-RSVD	10
11	Ground	NC	12	11	NC	+3.3V	12
13	CLK	Ground	14	13	RST#	NC	14
15	Ground	GNT#	16	15	3.3V	NC	16
17	REQ#	+5V	18	17	PME#	Ground	18
19	V(I/O)	AD[31]	20	19	AD[30]	AD[29]	20
21	AD[28]	AD[27]	22	21	Ground	AD[26]	22
23	AD[25]	Ground	24	23	AD[24]	+3.3V	24
25	Ground	C/BE[3]#	26	25	IDSEL	AD[23]	26
27	AD[22]	AD[21]	28	27	+3.3V	AD[20]	28
29	AD[19]	+5V	30	29	AD[18]	Ground	30
31	V(I/O)	AD[17]	32	31	AD[16]	C/BE[2]#	32
33	FRAME#	Ground	34	33	Ground	PMC-RSVD	34
35	Ground	IRDY#	36	35	TRDY#	+3.3V	36
37	DEVSEL#	+5V	38	37	Ground	STOP#	38
39	Ground	LOCK#	40	39	PERR#	Ground	40
41	PCI-RSVD	PMC-RSVD	42	41	+3.3V	SERR#	42
43	PAR	Ground	44	43	C/BE[1]#	Ground	44
45	V(I/O)	AD[15]	46	45	AD[14]	AD[13]	46
47	AD[12]	AD[11]	48	47	M66EN	AD[10]	48
49	AD[09]	+5V	50	49	AD[08]	+3.3V	50
51	Ground	C/BE[0]#	52	51	AD[07]	PMC-RSVD	52
53	AD[06]	AD[05]	54	53	+3.3V	PMC-RSVD	54
55	AD[04]	Ground	56	55	PMC-RSVD	Ground	56
57	V(I/O)	AD[03]	58	57	PMC-RSVD	PMC-RSVD	58
59	AD[02]	AD[01]	60	59	Ground	PMC-RSVD	60
61	AD[00]	+5V	62	61	ACK64#	+3.3V	62
63	Ground	REQ64#	64	63	Ground	PMC-RSVD	64

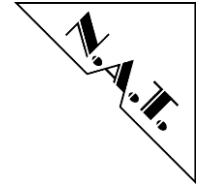 


5.2 AMC Connector CON1

Table 2: AMC Connector CON1


Pin No.	AMC-Signal	AMC-Signal	Pin No.
1	GND	GND	170
2	PWR	TDI	169
3	/PS1	TDO	168
4	PWR_IPMB	/TRST	167
5	GA0	TMS	166
6	RESVD	TCK	165
7	GND	GND	164
8	RESVD	NC	163
9	PWR	NC	162
10	GND	GND	161
11	NC	NC	160
12	NC	NC	159
13	GND	GND	158
14	NC	NC	157
15	NC	NC	156
16	GND	GND	155
17	GA1	NC	154
18	PWR	NC	153
19	GND	GND	152
20	NC	NC	151
21	NC	NC	150
22	GND	GND	149
23	NC	NC	148
24	NC	NC	147
25	GND	GND	146
26	GA2	NC	145
27	PWR	NC	144
28	GND	GND	143
29	NC	NC	142
30	NC	NC	141
31	GND	GND	140
32	NC	NC	139
33	NC	NC	138
34	GND	GND	137
35	NC	NC	136
36	NC	NC	135
37	GND	GND	134

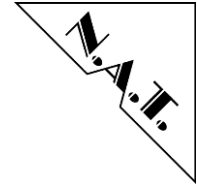 

Pin No.	AMC-Signal	AMC-Signal	Pin No.
38	NC	NC	133
39	NC	NC	132
40	GND	GND	131
41	/ENABLE	NC	130
42	PWR	NC	129
43	GND	GND	128
44	PORT4_TX_P	NC	127
45	PORT4_TX_N	NC	126
46	GND	GND	125
47	PORT4_RX_P	NC	124
48	PORT4_RX_N	NC	123
49	GND	GND	122
50	NC	NC	121
51	NC	NC	120
52	GND	GND	119
53	NC	NC	118
54	NC	NC	117
55	GND	GND	116
56	IPMB_SCL	NC	115
57	PWR	NC	114
58	GND	GND	113
59	NC	NC	112
60	NC	NC	111
61	GND	GND	110
62	NC	NC	109
63	NC	NC	108
64	GND	GND	107
65	NC	NC	106
66	NC	NC	105
67	GND	GND	104
68	NC	NC	103
69	NC	NC	102
70	GND	GND	101
71	IPMB_SDA	NC	100
72	PWR	NC	99
73	GND	GND	98
74	NC	NC	97
75	NC	NC	96
76	GND	GND	95
77	NC	NC	94
78	NC	NC	93

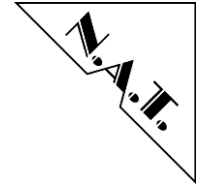 

Pin No.	AMC-Signal	AMC-Signal	Pin No.
79	GND	GND	92
80	FCLKA_P	NC	91
81	FCLKA_N	NC	90
82	GND	GND	89
83	/PS0	NC	88
84	PWR	NC	87
85	GND	GND	86

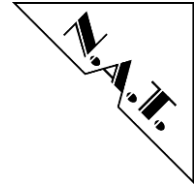 

5.3 DIP Switch SW1

5.3.1 PCIe Reference Clock Select Switch (SW1 Switch 1)

By switching switch no. 1 of DIL switch SW1 to ON, the reference clock provided by the system via FCLKA is selected. If switch no. 1 of DIL switch SW2 is switched to OFF, the local oscillator is selected as reference.

Default:

 
Switch no. 1 of DIL switch SW2 is switched to OFF, local oscillator is selected as reference clock for PCIe.

5.3.2 Reserved (SW1 Switch 2)

The output of that switch is connected to the micro controller for future use.


Default:

-

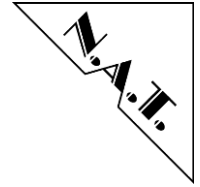

5.4 *Known Bugs / Restrictions*

 none

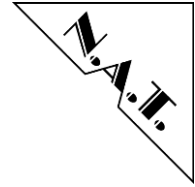

6 Document's History

Version	Date	Description	Author
1.0	06.05.2011	initial version	ks